



Programmable Keypad (PK-1)

Instructions



If you ordered a Programmable Keypad Remote (PKR-1) for use with the Programmable Keypad, the instructions are the same.

The Programmable Keypad (PK-1) provides occupant control of the sound masking and paging settings in private offices and meeting rooms, or anywhere else there is a need for individual control.

To activate the keypad, press any key. If the desired function is not currently highlighted, press the Select key to choose either Masking or Paging. The screen displays the current setting for that function.

To increase or decrease the volume, press the + or - key. The volume changes in 0.5 dBA steps. To restore the original setting, set the keypad to 00.

To mute, press the Mute key. The screen displays two dashes. To un-mute, press the Mute key again.

To change the paging channel, press the Select key until the screen displays a C. To move to another channel, press the + or - key.

NOTE: An administrator defines what area each keypad controls, the functions it offers and the degree to which users can adjust those functions. They also determine the parameters for the auto-reset feature. If permanent changes are required, contact the administrator.

WWW.LOGISON.COM